

**Notes**

BRC 944 Requires Daikin Connection Cable  
 3 Meter - BRCW901A03 / 8 Meter - BRCW901A08

KRP 928 B2S Requires 12v DC Power when fault & run connections are used.


Fault run output from S5 is 12v DC

S5 1 = Common, S5 2 = Run Signal, S5 3 = Fault Signal

S1 on / off connections are volt free.

Power Supply 12v DC

12V	0V
-----	----

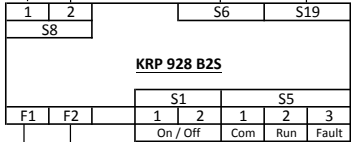

**Optional**  
 To Central Control Device or  
 F1 F2 Out Connection

S21

BRC944  
 Remote



intelligent comfort group

Drawing Title	FTXS-G / FDXS-E C HW CONTROL + FAULT / RUN
Date	28th March 2011
Drawn By	Richard Jones
Project Reference	GENERIC
Note - This document should be used as a guide only, always read the installation manual supplied with the equipment you are installing.	