

**Notes**


Outdoor unit not shown, connect via F1 F2 from indoor to outdoor.

Fire alarm shutdown available via S6 input. Close on fire across 0v & S6 on master RTD-10.

Connect alarm signals to master RTD-10 if required.

Aux Temp sensor senses room condition and generates Level 1 alarm at setpoint + 2 deg C and Level 2 alarm at setpoint +4 degrees C. Use RS Part 813 806 for sensor.

This document is a guide only. Installer should check the installation documentation supplied with the equipment before carrying out installation.

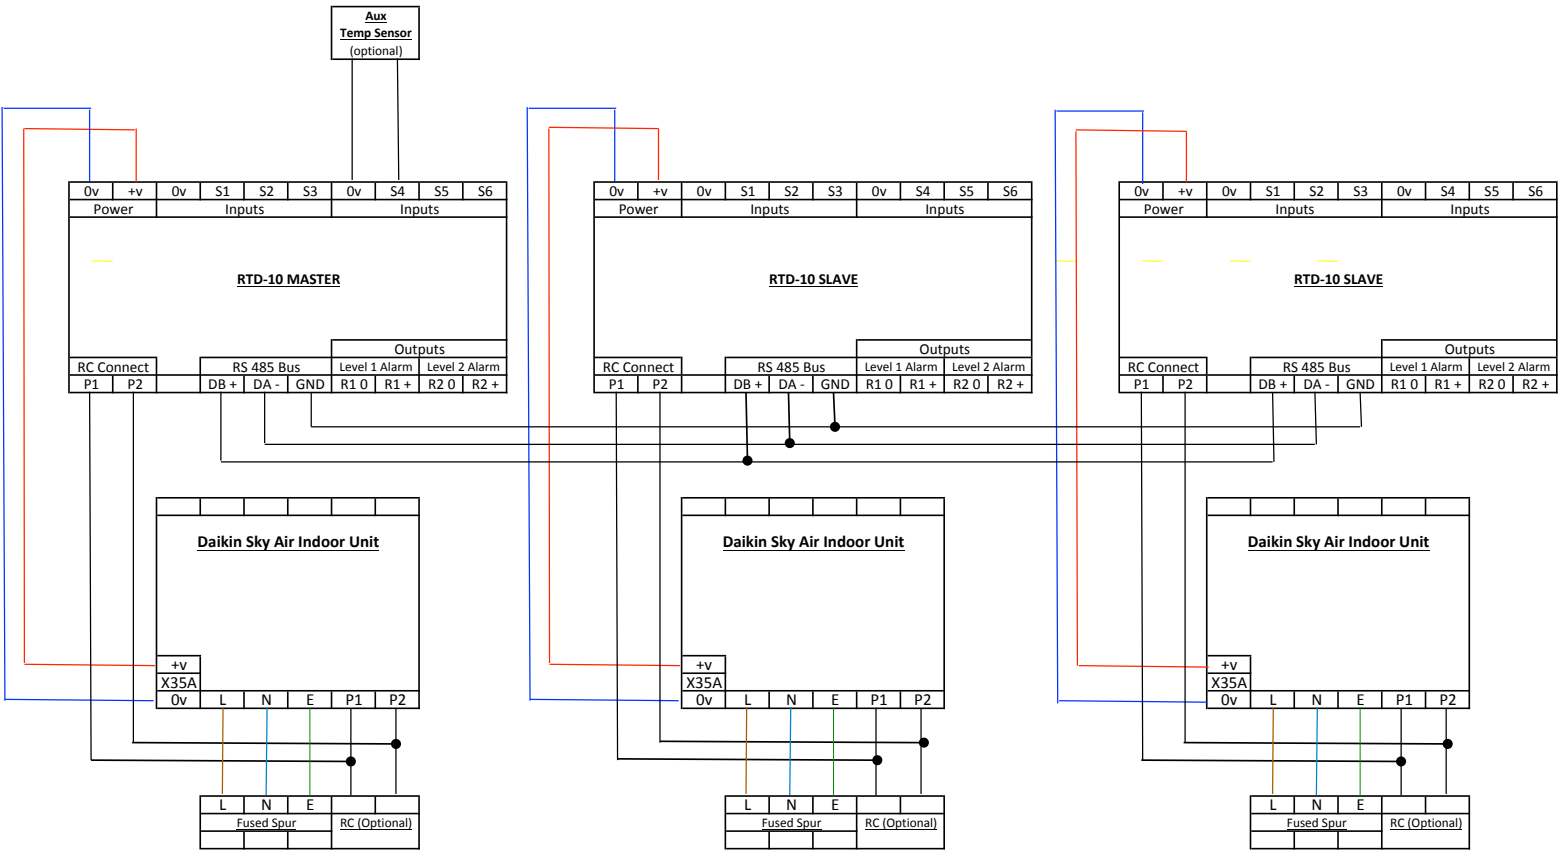

intelligent comfort group

Drawing Title	RTD-10 Comms Room Application
Date	28th March 2011
Drawn By	Richard Jones
Project Reference	GENERIC

Note - This document should be used as a guide only, always read the installation manual supplied with the equipment you are installing.